

V1B

Quick guide

ELECTRICAL INSTALLATION

1

Set the selector to "zero" before powering the equipment.


2

Leave the fault/phase sequence selector OFF


Voltage selection

Select the desired supply voltage (400 V default).


3 Power input connection

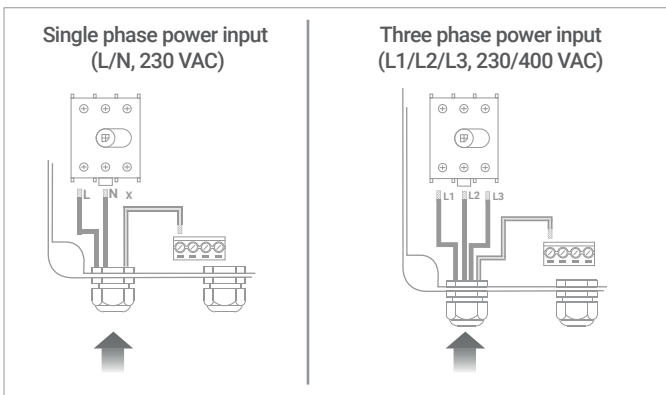

4 Outlet connection to pumps

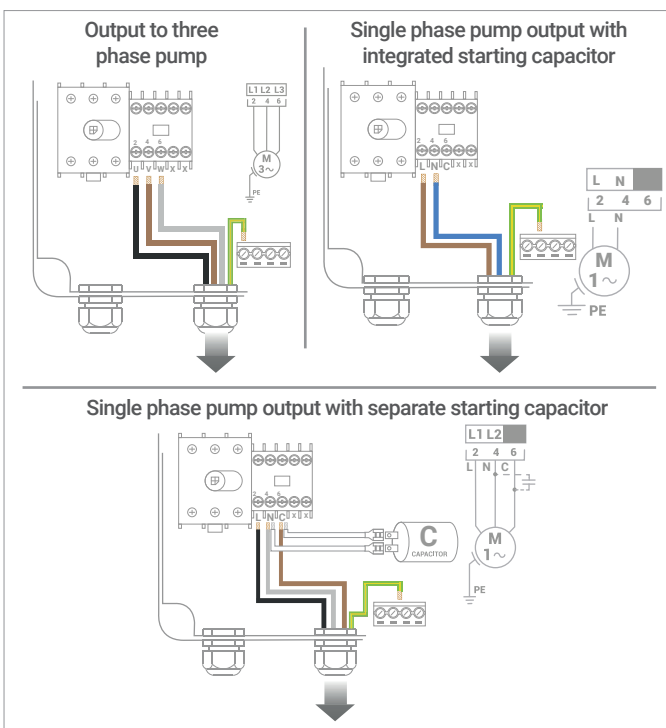

CONTROL AND PROTECTION WIRING

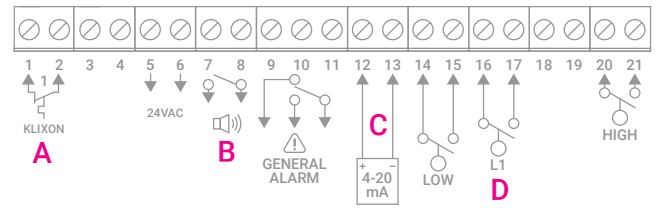

- A. KLIXON input
B. Connection for alarm output
C. Level sensor input connection
D. Inlet connections for floats

HANDLING OF EQUIPMENT

Manual mode

The pump works in forced operation for a maximum of 15 seconds

Zero mode

The pump can't work

Automatic mode

The pump will start when necessary

THERMAL PROTECTION SETTINGS

- Manual setting Imax 1

Select

Press

Modify value

Hold down

Release when value appears

! If you do not touch the control for more than 15 seconds, the device will return to the main screen.

MUTING THE BUZZER

Any activated alarm

Press

Mute buzzer


CONSULTATION OF OPERATING DATA (DATALOGGER)

Select SET

Press

Press and release

Pump 1

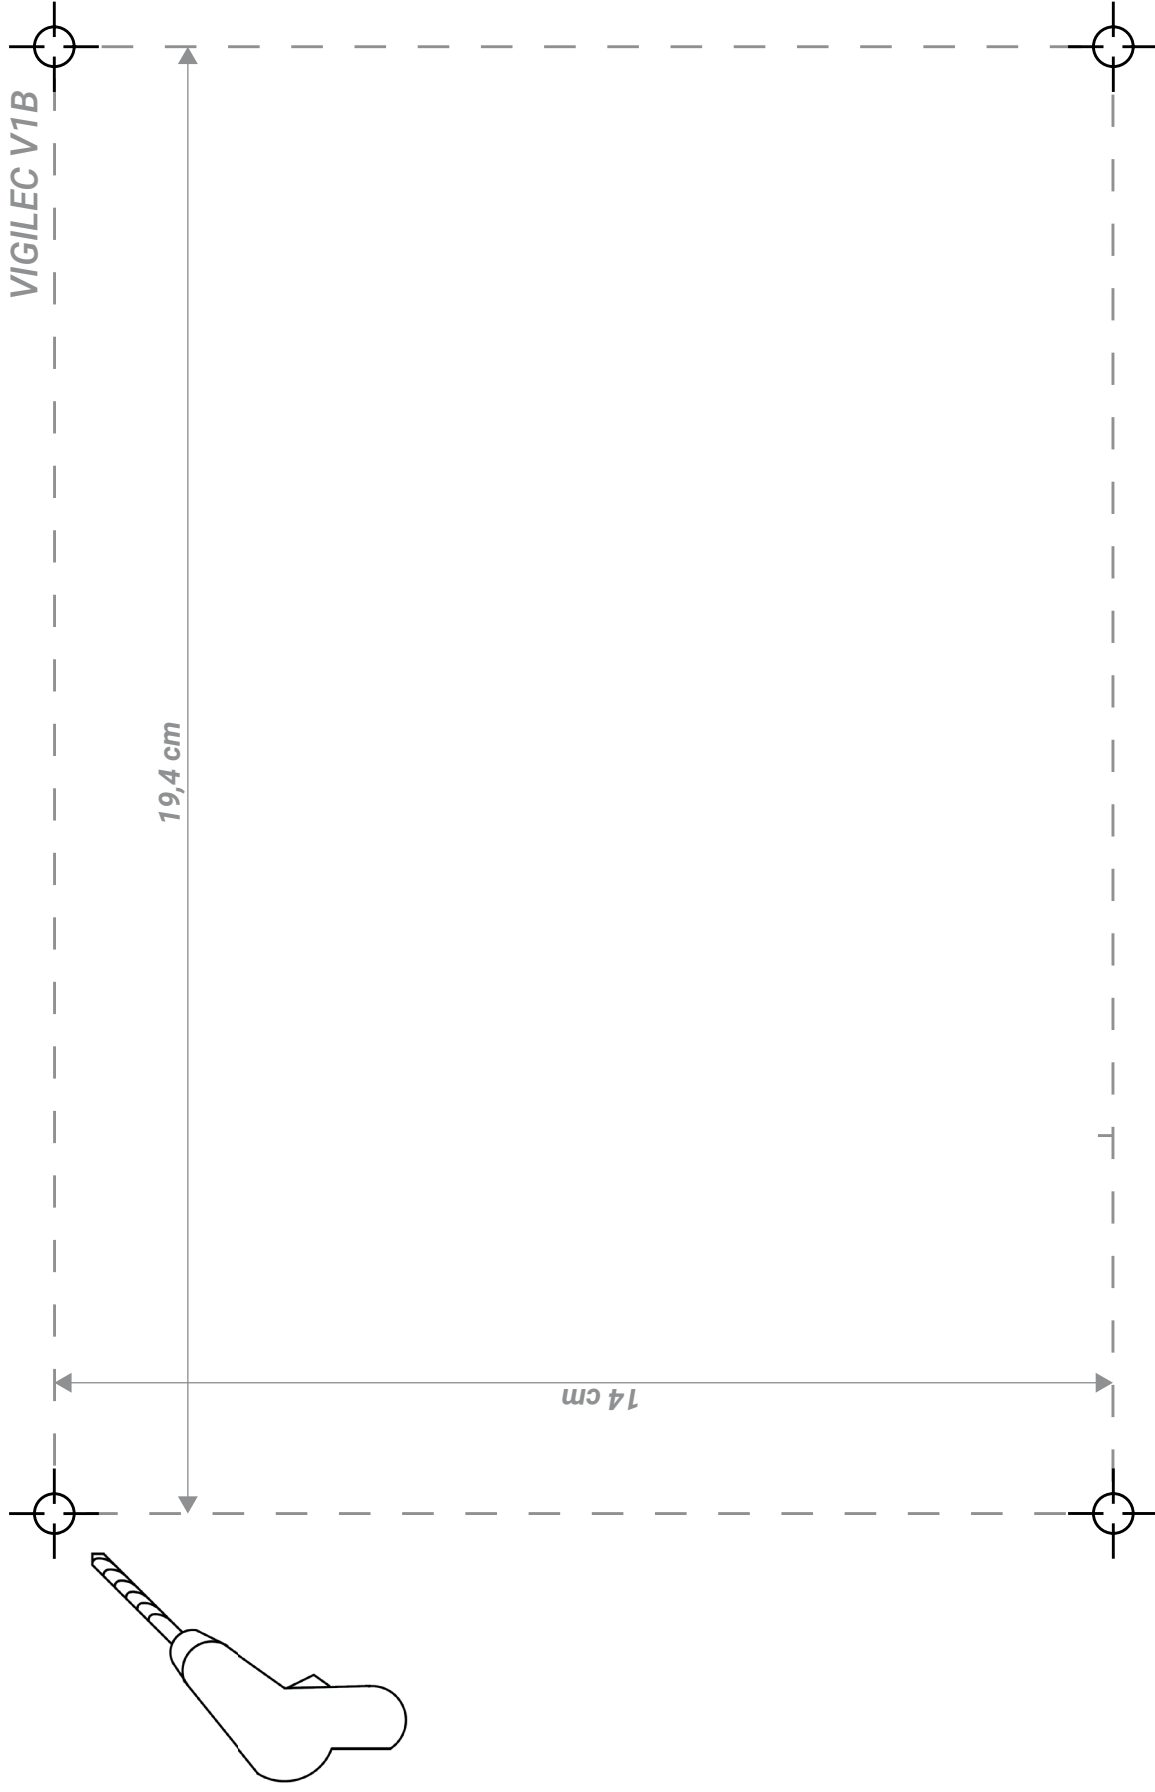

toscano

Toscano Línea Electrónica, S.L.

Av. A-92, Km. 6,5 - 41500 - Alcalá de Guadaira - SEVILLA - SPAIN (+34) 954 999 900 - www.toscano.es - info@toscano.es