

V2B

Quick guide

ELECTRICAL INSTALLATION

1

Set the selectors to "zero" before powering the equipment.

2


Voltage 230 VI: OFF
Voltage 230/400 V III: ON or OFF

Voltage selection


230V
400V

Select the required supply voltage (400 V factory mounting).


3 Power input connection

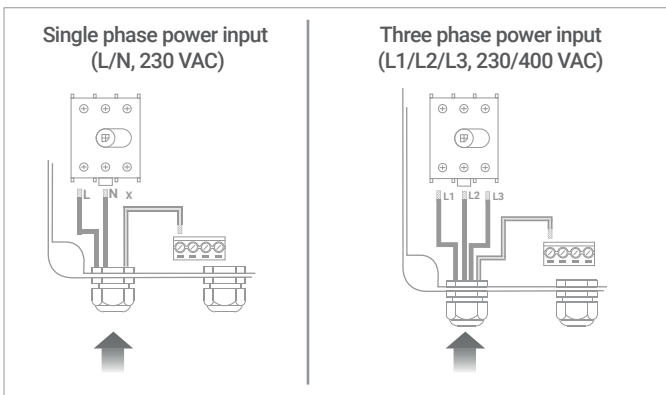

4 Outlet connection to pumps

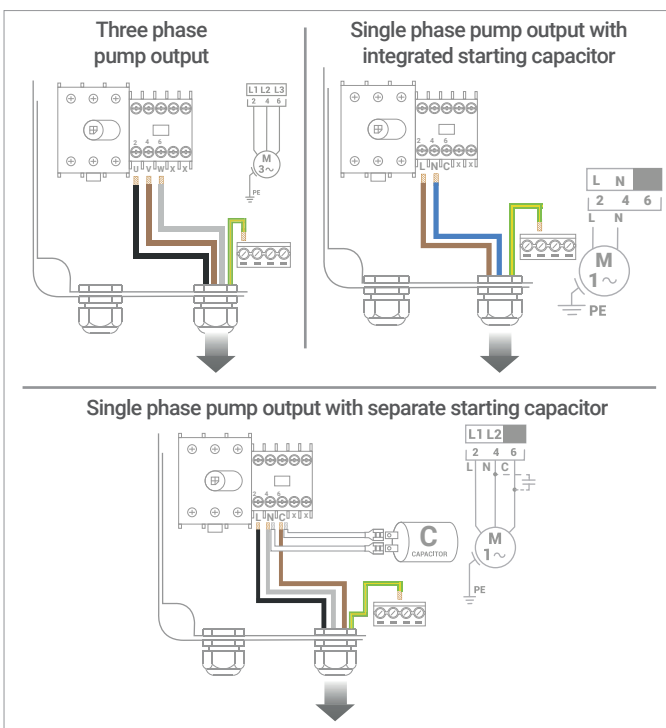

CONTROL AND PROTECTION WIRING

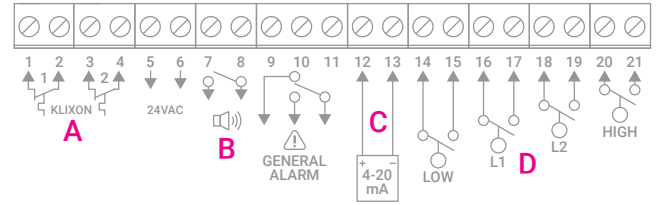

A. Motor temperature probes
B. Alarm outputs

C. 4-20 mA analogue level sensor
D. Float switches

HANDLING OF EQUIPMENT

Manual mode

The pump works in forced operation for a maximum of 15 seconds

Zero mode

The pump can't work

Automatic mode

The pump will start when necessary

THERMAL PROTECTION SETTINGS

- Manual setting I_{max} 1 / I_{max} 2 (one per pump)

Select

Press

Modify value

Hold down

Release when value appears

The same procedure should be carried out for I_{max} 2.

If you do not touch the control for more than 15 seconds, the device will return to the main screen.

MUTING THE BUZZER

Any activated alarm

Press

Mute buzzer

CONSULTATION OF OPERATING DATA

Select SET


Press

Press and release

Pump 1

Pump 2

Operating hours
N° of startups
N° of alarms
Current of the last alarm trip
Software version

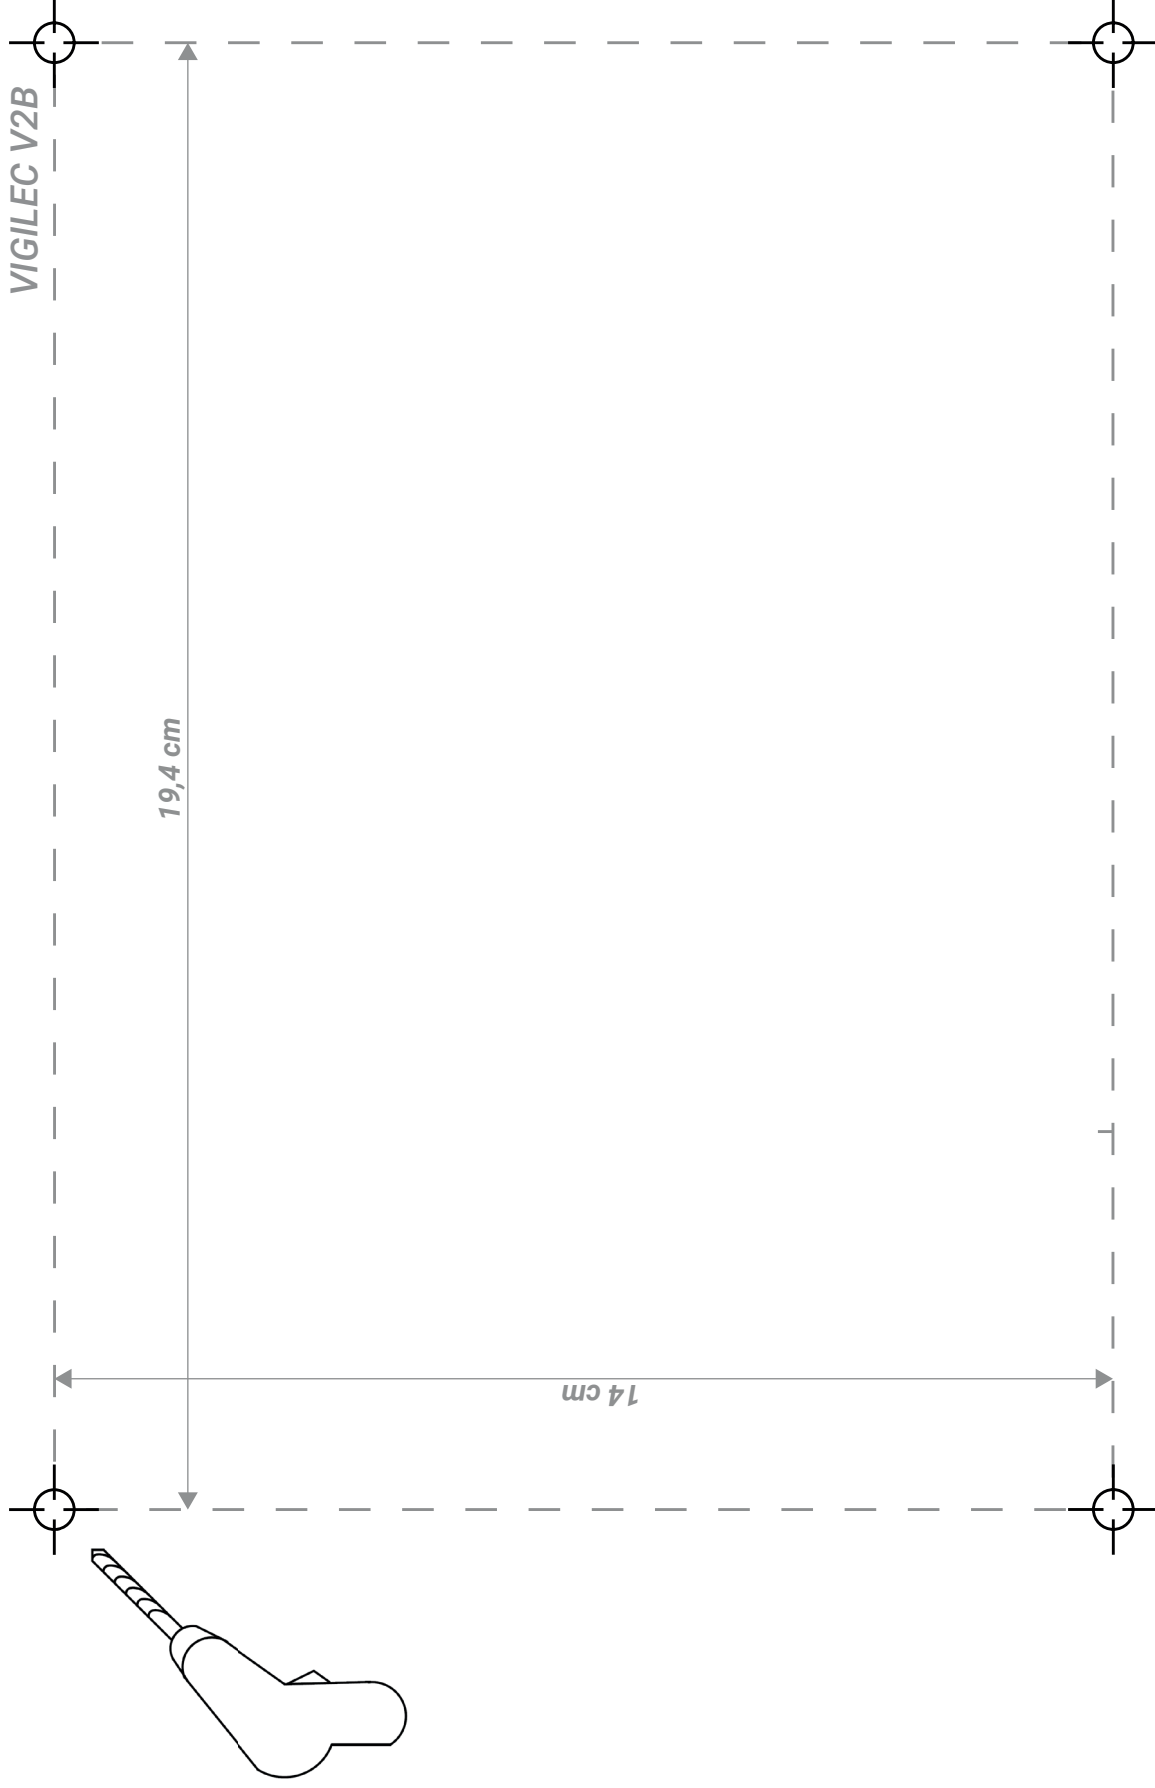

toscano

Toscano Línea Electrónica, S.L.

Av. A-92, Km. 6,5 - 41500 - Alcalá de Guadaira - SEVILLA - SPAIN (+34) 954 999 900 - www.toscano.es - info@toscano.es